

ENR 2. AIR TRAFFIC SERVICES AIRSPACE

ENR 2.1 FIR, UIR, TMA

<i>Name Lateral limits Vertical limits Class of airspace</i>	<i>Unit providing service</i>	<i>Call sign Languages Area and conditions of use Hours of service</i>	<i>Frequency/ Purpose</i>	<i>Remarks</i>
1	2	3	4	5
MONTEVIDEO FIR Join the following points in succession: From 301500S/0573700W along Brazil-Uruguay borderline and from there to 335300S/0532300W - 340000S/0530000W - 340000S/0100000W - 390000S/0100000W - 390000S/0443000W - 400000S/0450000W - 360000S/0545000W - 345300S/0570600W - 343500S/0575000W - 340000S/0582400W - 335000S/0583100W - 330200S/0582400W - 312300S/0575900W - 301500S/0573700W. <u>UNL</u> GND Class of airspace: G except CTA	Montevideo ACC	Montevideo Control Spanish, English	128.5 MHZ ☛ 126.3 MHZ	
MONTEVIDEO CONTROL AREA (CTA) Comprised between the following points in succession: from 301500S/0573700W along Brazil-Uruguay borderline and from there to:	Montevideo ACC	Montevideo Control Spanish, English	128.5 MHZ ☛ 126.3 MHZ	

<i>Name Lateral limits Vertical limits Class of airspace</i>	<i>Unit providing service</i>	<i>Call sign Languages Area and conditions of use Hours of service</i>	<i>Frequency/ Purpose</i>	<i>Remarks</i>
1	2	3	4	5
335300S/0532300W, 340000S/0530000W, 340000S/0513320W, 364530S/0531147W, 360000S/0545000W, 345300S/0570600W, 343500S/0575000W, 340000S/0582400W, 335000S/0583100W, 330200S/0582400W, 312300S/0575900W, 301500S/0573700W. <u>UNL</u> GND Class of airspace: A - above FL 195 to UNL C - above FL 085 to FL 195 G - from GND to FL 085 F - 30 NM arc centred at  ARP SUSO between FL 035 and FL 085 F - 30 NM arc centred at SURV ARP between FL 035 and FL 085 F - 30 NM centred at 342705S/0574601W between FL 035 and FL 085	Montevideo ACC	Montevideo Control Spanish, English	128.5 MHZ 126.3 MHZ	Except the CTR, FIZ and TMA.
MONTEVIDEO OCEANIC SECTOR Area comprised between the following points: 340000S/0513320W, 340000S/0420000W, 400000S/0450000W, 364530S/0531147W y 340000S/0513320W. <u>UNL</u> MSL Class of airspace: G	Montevideo ACC	Montevideo Control Spanish, English	128.5 MHZ 126.3 MHZ	Alternate communication Montevideo ACC, phone (598) 26040295


<i>Name Lateral limits Vertical limits Class of airspace</i>	<i>Unit providing service</i>	<i>Call sign Languages Area and conditions of use Hours of service</i>	<i>Frequency/ Purpose</i>	<i>Remarks</i>
1	2	3	4	5
MONTEVIDEO EASTERN SECTOR Area comprised between the following points: 340000S/0420000W, 340000S/0100000W, 390000S/010000W, 390000S/0443000W and 340000S/0420000W <u>UNL</u> <u>MSL</u> Class of airspace: G	Montevideo ACC	Montevideo Control Spanish, English	128.5 MHZ 126.3 MHZ	Alternate communication Montevideo ACC, phone (598) 26040295
RVSM AIRSPACE Overlaps with Montevideo FIR <u>FL 410</u> <u>FL 290</u> Class of airspace: A - Above FL 290 to FL 410 G – Inside Montevideo Eastern sector. G – Inside Montevideo Oceanic sector	Montevideo ACC	Montevideo Control Spanish, English	128.5 MHZ 126.3 MHZ	Minimum vertical separation: 1000 FT Table of cruising levels will be used (see ENR 1.7-5). Alternate communication Montevideo ACC, phone (598) 26040295

<i>Name Lateral limits Vertical limits Class of airspace</i>	<i>Unit providing service</i>	<i>Call sign Languages Area and conditions of use Hours of service</i>	<i>Frequency/ Purpose</i>	<i>Remarks</i>
1	2	3	4	5
CARRASCO TMA Straight line which join the following points (UGIM) 345858S/0565302W up to 343300S/0563200W. 30 NM arc centred at CRR VOR/ DME up to 342000S/0560000W. Straight line up to 342127S/0550546W. 30 NM arc from LDS VOR/DME up to the following points 345200S/0542900W, straight line up to 361000S/0542900W, straight line up to the following points 345900S/0565300W. <u>FL 245</u> GND Class of airspace: A - Above FL 195 up to FL 245 C - Above 600 M up to FL 195 G - From GND up to 600 M See ENR 2.1-7	Carrasco APP	Carrasco Approach Spanish, English	119.2 MHZ 120.2 MHZ	Except the CTR and FIZ

<i>Name</i> <i>Lateral limits</i> <i>Vertical limits</i> <i>Class of airspace</i>	<i>Unit providing service</i>	<i>Call sign</i> <i>Languages</i> <i>Area and conditions of use</i> <i>Hours of service</i>	<i>Frequency/ Purpose</i>	<i>Remarks</i>
1	2	3	4	5
DURAZNO TMA Area limited by a circumference, radius 30 NM (56 KM) centred at DUR VOR/DME. <u>FL 195</u> GND Class of airspace: C	Durazno APP	Durazno Approach 🇪🇸 Spanish, English (O/R)	120.4 MHZ	

**INTENTIONALLY
LEFT BLANK**

AIRSPACE CLASSIFICATION

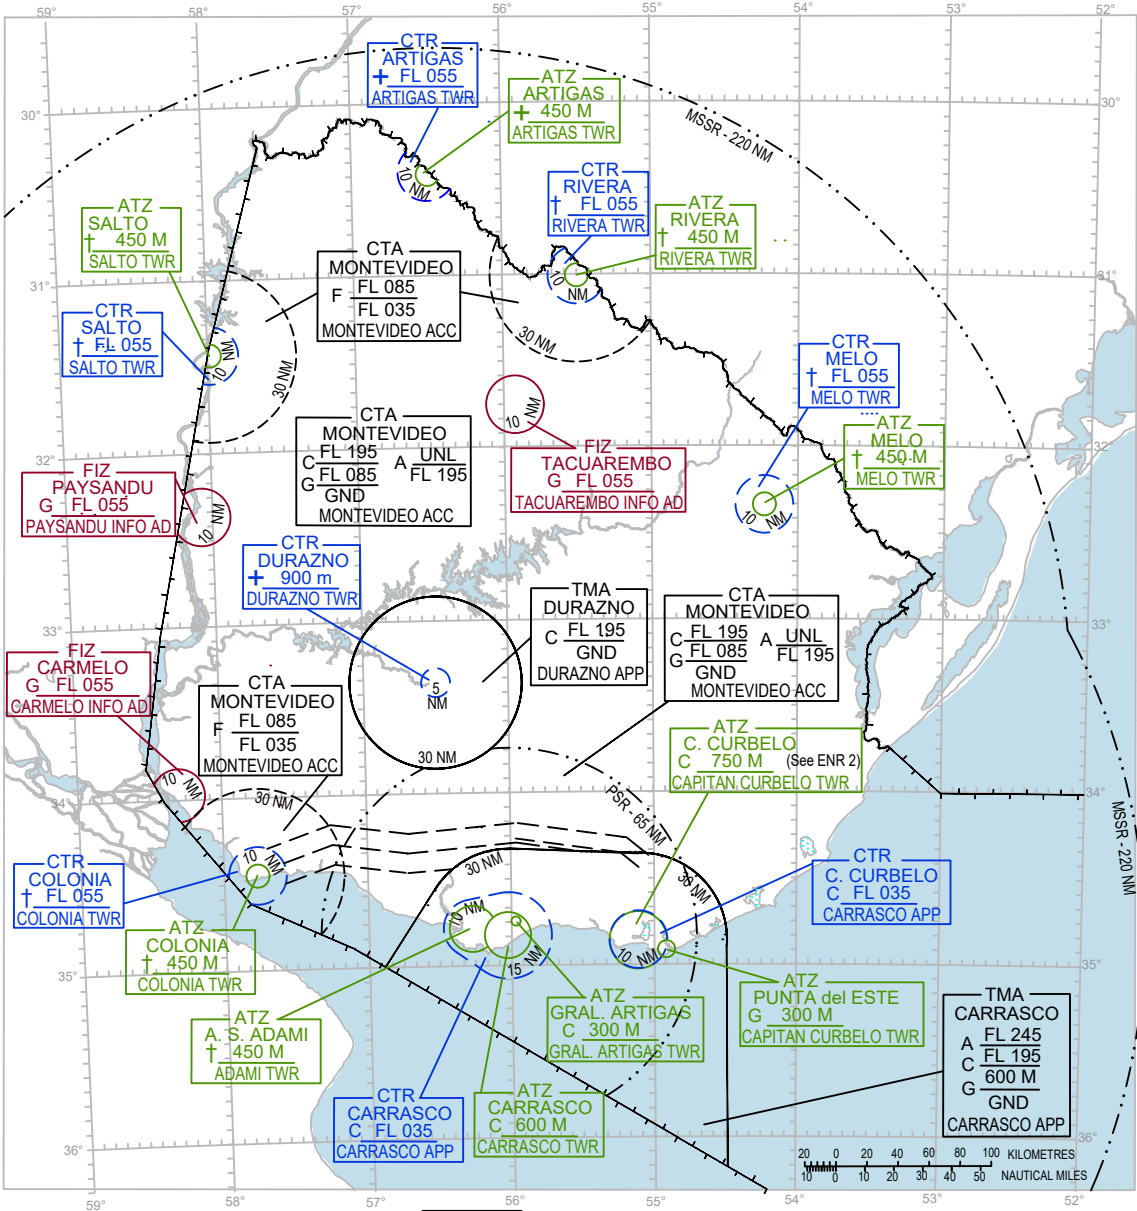

From FL 085 up to FL 195, airspace class C.
From GND up to FL 085, airspace class G.

C FL 195
G FL 085
GND

From GND up to 600 M, airspace class C.

ATZ CARRASCO
C 600 M
CARRASCO TWR

MONTEVIDEO OCEANIC SECTOR
MONTEVIDEO EASTERN SECTOR G UNL
MSL

MSSR ... Monopulse Secondary Surveillance Radar

Monday to Friday (except holidays) from 10:00 to 22:00 UTC: Class "C"; Others: Class "G"	*
Monday to Friday (except holidays) from 11:00 to 23:00 UTC: Class "C"; Others: Class "G"	±
Monday to Sunday from 10:00 to 22:00 UTC: Class "C"; Others: Class "G"	†
Monday to Friday from 10:00 to 22:00 UTC: Class "C"; Others: Class "G"	+

**INTENTIONALLY
LEFT BLANK**

2.2 OTHER REGULATED AIRSPACE

<i>Name Lateral limits Vertical limits Class of airspace</i>	<i>Unit providing service</i>	<i>Callsign Languages Area and conditions of use Hours of service</i>	<i>Frequency/ Purpose</i>	<i>Remarks</i>
1	2	3	4	5
ARTIGAS CTR CTR arc, radius 10 NM (18.5 Km) centred at 302357S/0563039W <u>FL 055</u> GND Class of airspace: ☛ from Monday to Friday from 10:00 to 22:00 UTC: "C"; others: "G".	Artigas TWR	Artigas Tower Spanish	122.1 MHZ	
CAPITÁN CURBELO CTR CTR arc, radius 10 NM (18.5 KM) centred at LDS VOR/DME. <u>FL 035</u> GND Class of airspace: C	Carrasco APP	Carrasco Approach Spanish, English	119.2 MHZ 120.2 MHZ	
CARRASCO CTR CTR arc, radius 15 NM (27.8 KM) centred at CRR VOR/DME clockwise from 343511S/0560444W up to 350217S/0561158W, straight line up to 345534S/0562246W, CTR arc radius 10 NM (18.5 KM) centred at ASI NDB clockwise up to 343731S/0561754W and straight up to 343511S/0560444W. <u>FL 035</u> GND Class of airspace: C	Carrasco APP	Carrasco Approach Spanish, English	119.2 MHZ 120.2 MHZ	If ZOM 5 were active, it will be excluded from CARRASCO CTR.

<i>Name Lateral limits Vertical limits Class of airspace</i>	<i>Unit providing service</i>	<i>Callsign Languages Area and conditions of use Hours of service</i>	<i>Frequency/ Purpose</i>	<i>Remarks</i>
1	2	3	4	5
COLONIA CTR CTR arc, radius 10 NM (18 KM) centred at 342705S/0574601W <u>FL 055</u> GND Class of airspace: from Monday to Sunday from 10:00 to 22:00 UTC: "C"; others: "G".	Colonia TWR	Colonia Tower Spanish, English (O/R)	120.8 MHZ 122.1 MHZ	Inside Montevideo FIR
DURAZNO CTR CTR circle, radius 5 NM (9 KM) centred at DUR VOR/DME <u>900 M</u> GND Class of airspace: ☛ from Monday to Friday from 10:00 to 22:00 UTC: "C"; others: "G".	Durazno TWR	Durazno Tower Spanish, English (O/R)	126.20 MHZ	MIL AD
MELO CTR CTR circle, radius 10 NM (18.5 KM) centred at 322033S/ 0541319W <u>FL 055</u> GND Class of airspace: from Monday to Sunday from 10:00 to 22:00 UTC: "C"; others: "G".	Melo TWR	Melo Tower Spanish	118.6 MHZ 122.1 MHZ	

<i>Name Lateral limits Vertical limits Class of airspace</i>	<i>Unit providing service</i>	<i>Callsign Languages Area and conditions of use Hours of service</i>	<i>Frequency/ Purpose</i>	<i>Remarks</i>
1	2	3	4	5
RIVERA CTR CTR arc, radius 10 NM (18 KM) centred at 305810S/0552824W <u>FL 055</u> GND Class of airspace: from Monday to Sunday from 10:00 to 22:00 UTC: "C"; others: "G".	Rivera TWR	Rivera Tower Spanish, English (O/R)	118.0 MHZ 122.1 MHZ	Inside Montevideo FIR
SALTO CTR CTR arc, radius 10 NM (18 KM) centred at 312605S/0575903W <u>FL 055</u> GND Class of airspace: from Monday to Sunday from 10:00 to 22:00 UTC: "C"; others: "G".	Salto TWR	Salto Tower Spanish, English (O/R)	118.8 MHZ 122.1 MHZ	Inside Montevideo FIR
A.S. ADAMI ATZ ATZ arc, radius 8 NM (14.8 KM) centred at ASI NDB clockwise from 345350S/0561002W up to 344331S/0560716W. <u>450 M</u> GND Class of airspace: from Monday to Sunday from 10:00 to 22:00 UTC: "C"; others: "G".	Adami TWR	Adami Tower Spanish, English (O/R)	118.4 MHZ 122.1 MHZ	

<i>Name</i> <i>Lateral limits</i> <i>Vertical limits</i> <i>Class of airspace</i>	<i>Unit providing service</i>	<i>Callsign</i> <i>Languages</i> <i>Area and conditions of use</i> <i>Hours of service</i>	<i>Frequency/ Purpose</i>	<i>Remarks</i>
1	2	3	4	5
ARTIGAS ATZ ATZ arc, radius 4 NM (7.4 KM) centred at 302357S/0563039W <u>450 M</u> GND Class of airspace:  from Monday to Friday from 10:00 to 22:00 UTC: "C"; others: "G".	Artigas TWR	Artigas Tower Spanish	122.1 MHZ	
CARRASCO ATZ ATZ circle, radius 8 NM (14.8 KM) centred at CRR VOR/DME. <u>600 M</u> GND Class of airspace: C	Carrasco TWR	Carrasco Tower Spanish, English.	118.1 MHZ 121.8 MHZ	If ZOM 5 were active, it will be excluded from CARRASCO CTR.
COLONIA ATZ ATZ circle, radius 4 NM (7.4 KM) centred at 342705S/0574601W. <u>450 M</u> GND Class of airspace: from Monday to Sunday from 10:00 to 22:00 UTC: "C"; others: "G".	Colonia TWR	Colonia Tower Spanish, English (O/R)	120.8 MHZ 122.1 MHZ	

<i>Name Lateral limits Vertical limits Class of airspace</i>	<i>Unit providing service</i>	<i>Callsign Languages Area and conditions of use Hours of service</i>	<i>Frequency/ Purpose</i>	<i>Remarks</i>
1	2	3	4	5
CURBELO ATZ ATZ circle, radius 10 NM (18.5 KM) centred at LDS VOR/DME, except PUNTA del ESTE ATZ <u>750 M</u> GND Class of airspace: C	Capitán Curbelo TWR	Capitán Curbelo Tower Spanish/English	118.3 MHZ 122.1 MHZ	
GRAL. ARTIGAS ATZ ATZ circle, radius 1.6 NM (3 KM) centred at 344450S/0555740W <u>300 M</u> GND Class of airspace: C	Gral. Artigas TWR	General Artigas Tower Spanish	118.5 MHZ	MIL AD
MELO ATZ ATZ circle, radius 4 NM (7.4 KM) centred at 322033S/ 0541319W <u>450 M</u> GND Class of airspace: ☛ from Monday to Sunday from 10:00 to 22:00 UTC: "C"; others: "G".	Melo TWR	Melo Tower Spanish	118.6 MHZ 122.1 MHZ	
PUNTA del ESTE ATZ ATZ circle, radius 3 NM (5.6 KM) centred at ARP (345447S/ 0545509W). <u>300 M</u> GND Class of airspace: G	Nil	Nil	118.7 MHZ	See AD 2.11-9

<i>Name Lateral limits Vertical limits Class of airspace</i>	<i>Unit providing service</i>	<i>Callsign Languages Area and conditions of use Hours of service</i>	<i>Frequency/ Purpose</i>	<i>Remarks</i>
1	2	3	4	5
RIVERA ATZ ATZ arc, radius 4 NM (7.4 KM) centred at 305810S/0552824W. <u>450 M</u> GND Class of airspace: from Monday to Sunday from 10:00 to 22:00 UTC: "C"; others: "G".	Rivera TWR	Rivera Tower Spanish, English (O/R)	118.0 MHZ 122.1 MHZ	
SALTO ATZ ATZ arc, radius 4 NM (7.4 KM) centred at 312605S/ 0575903W <u>450 M</u> GND Class of airspace: from Monday to Sunday from 10:00 to 22:00 UTC: "C"; others: "G".	Salto TWR	Salto Tower Spanish, English (O/R)	118.8 MHZ 122.1 MHZ	Inside Montevideo FIR
CARMELO FIZ ATZ arc, radius 10 NM (18.5 KM) circle centred at 335758S/0581931W <u>FL 055</u> GND Class of airspace: G	Carmelo AFIS	Carmelo Information Spanish	📡 118.0 MHZ 122.1 MHZ	Inside FIR Montevideo
PAYSANDÚ FIZ FIZ arc, radius 10 NM (18.5 KM) centred at 322151S/0580344W <u>FL 055</u> GND Class of airspace: G	Paysandú AFIS	Paysandú Information Spanish	118.2 MHZ	Inside Montevideo FIR

<i>Name</i> <i>Lateral limits</i> <i>Vertical limits</i> <i>Class of airspace</i>	<i>Unit providing service</i>	<i>Callsign</i> <i>Languages</i> <i>Area and conditions of use</i> <i>Hours of service</i>	<i>Frequency/ Purpose</i>	<i>Remarks</i>
1	2	3	4	5
TACUAREMBÓ FIZ  FIZ circle, radius 10 NM (18.5 KM) centred at 314501S/ 0555526W <u>FL 055</u> GND Class of airspace: G	Tacuarembó AFIS	Tacuarembó Information Spanish	122.1 MHZ	

**INTENTIONALLY
LEFT BLANK**